

SUN VISOR

Replacement

1. Remove roof panel.
2. Remove access plug.
3. Remove retainer and spring and remove sun visor.
4. Reverse procedure for installation.

