


ECKLER'S[®]

Glove Box Cover

Installation Instructions


Items needed for installation: Medium sized Phillips-head screwdriver.

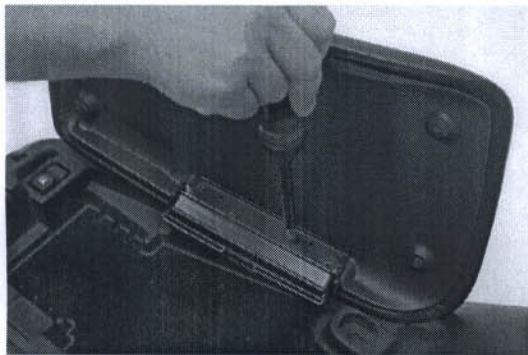


Step 1: Move passenger seat fully forward when removing or installing armrest. Remove the 4 screws that secure the console lid to the hinge assembly.




Step 2: Remove the 2 screws that secure the armrest latch. (Note the direction of the latch when removing.)

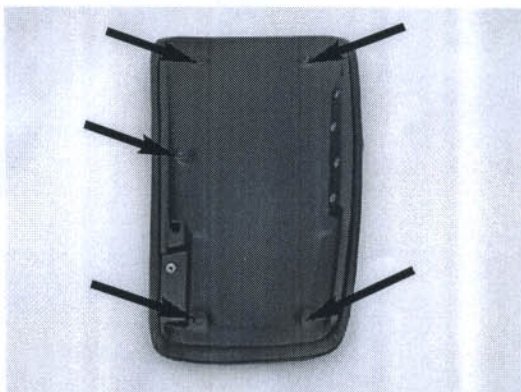


Step 3: Remove the 5 remaining screws and separate the two parts of the armrest. (inner and outer shells)

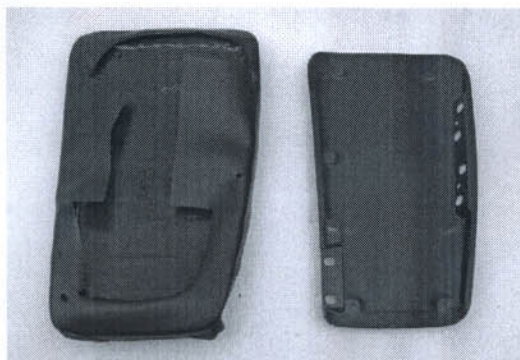

Step 4: Take the outer shell (top part of factory armrest) and insert it into the Glove Box Cover. Start at the front of the cover working it around the side where the 4 screws were removed.

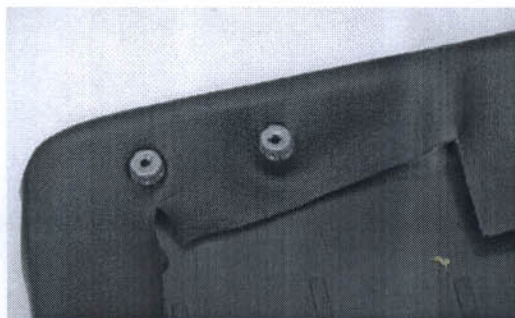

Step 5: Work the Glove Box Cover in a clockwise manner. (This will be a tight fit.) With the Glove Box Cover completely on adjust the cover for the best finished look. Make sure that all 6 factory nuts penetrate through the precut holes on the Glove Box Cover.

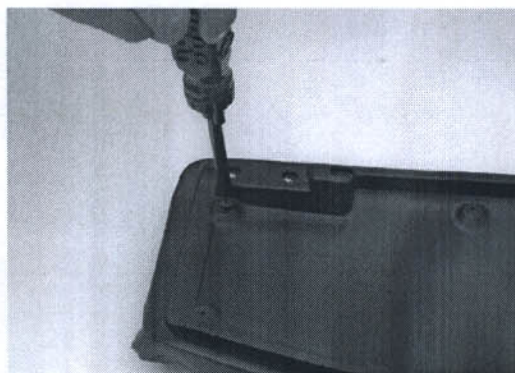

Step 6: Reinstall reversing Steps 1-3.



Step 7: Finished.